

KSTRONG 2 MAN 20M WEBBING HORIZONTAL LIFELINE

AFA940001


KStrong Horizontal Lifeline has been designed to be a temporary webbing static line allowing the users to be secured either in restraint or fall arrest when working near exposed edges.

Features

- Consists of Ratchet Tensioner that allows easy tensioning of the lifeline between two structures.
- Has 2 Cross Arm Straps each to tie off to the structure where the anchorage is required.
- The complete system is supplied in a bag, which is permanently attached to the assembly and also enables the user to easily transport.
- Lanyard can be connected with Karabiners to the HLL allowing movement along the length while keeping the user secured and safe at all times.
- Suitable for 2 users.



How To Use

Refer to User Instruction Manual 

Textile Components

| | | |
|-----------------|---|------------------------------------|
| Webbing | : | Polyester 30mm Wide MBS 25kN |
| Cross Arm Strap | : | Polyester 44mm MBS 25kN |

Metal Components

| | | |
|---------------------------|---|---|
| Karabiners (AFC601105) | : | Alloy Steel Galvanized With Silver Passivation MBS 40kN |
| Ratchet Tensioner | : | Carbon Steel Silver Passivation 15kN MBS |

System Strength and Span


| | | |
|---------------------------|---|------|
| Minimum Breaking Strength | : | 25kN |
| Minimum Span | : | 5M |
| Maximum Span | : | 20M |

Weight

4.120kg ± 0.05kg

Relevant Standards

EN 795:2012 & TS 16415:2013 Type B and C (for upto 2 users)

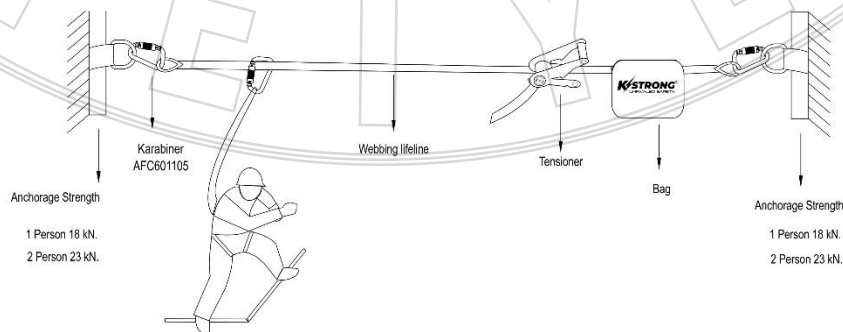

CE 0598